


## Removing variable convertible roof compartment

### 1 - Variable convertible roof compartment

- ❑ Position convertible roof so that convertible roof compartment is open.
- ❑ Raise side lining in convertible roof compartment.
- ❑ Unscrew bolts on left and right - 2- (2x).
- ❑ Close convertible roof.
- ❑ Open rear lid.
- ❑ Remove flap for convertible roof compartment  
→ Chapter.
- ❑ Remove trim for handle mounting  
→ Chapter.
- ❑ Unfasten Bowden cables from clips.
- ❑ Insert large flat screwdriver -6- between side section of convertible roof compartment -4- and bracket -3- and carefully release convertible roof compartment from bracket -5- (attached with adhesive tape).
- ❑ Unplug connector to microswitch -7- (right-side).
- ❑ Unfasten Bowden cables from clips.
- ❑ Close rear lid.
- ❑ Return convertible roof to "Convertible roof compartment open" position.
- ❑ Second mechanic is required for lifting out.
- ❑ Position trim for handle mounting on variable convertible roof compartment.

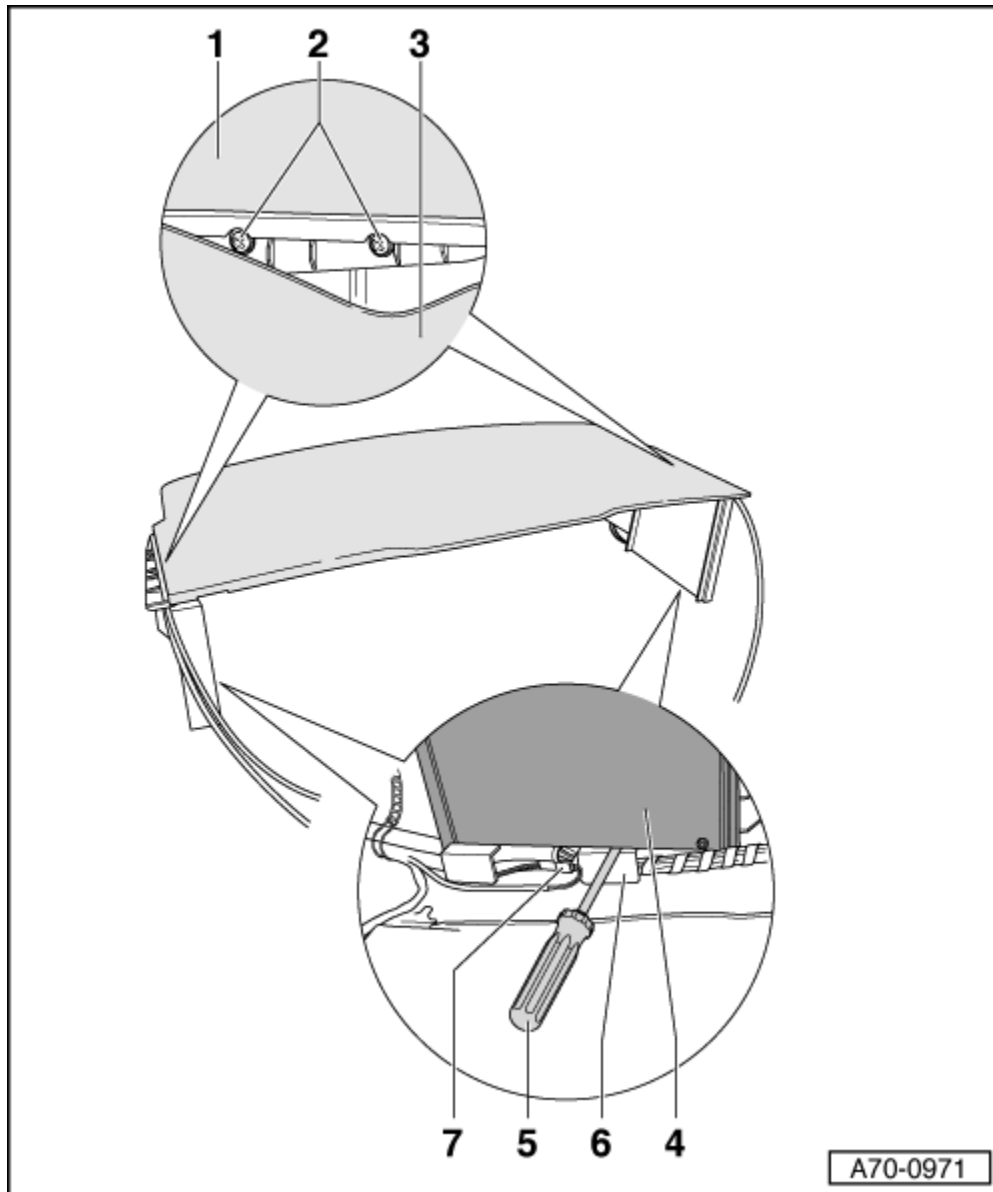

- ❑ Remove luggage compartment side trim (left-side → Chapter and right-side → Chapter).

**Note**

*The variable convertible roof compartment is to be lifted at the side frame sections. Never grasp hold of the centre of the convertible roof compartment and extend the mechanism.*

- ❑ Lift out variable convertible roof compartment -1- at both side sections -4-.
- ❑ Make sure Bowden cables do not catch.

**2 - Bolts (2x)**

- ❑ Tightening torque: 2 Nm

**3 - Convertible roof compartment side lining****4 - Convertible roof compartment side section****5 - Flat screwdriver****6 - Bracket****7 - Microswitch connector**