


Removing flap for convertible roof compartment

1 - Flap for convertible roof compartment



Note

- ♦ *The variable convertible roof compartment must be in the lowest position.*
- ♦ *Removal of convertible roof compartment flap -1- does not involve unscrewing hinges -2-.*
- ♦ *Arrow points in direction of travel.*
- Bend convertible roof compartment flap -1- on one side at hinge and disengage convertible roof compartment flap -1- at hinges.
- Fold down convertible roof compartment flap -1-.
- Disengage flap at hooks -4- (2x) by sliding forwards.

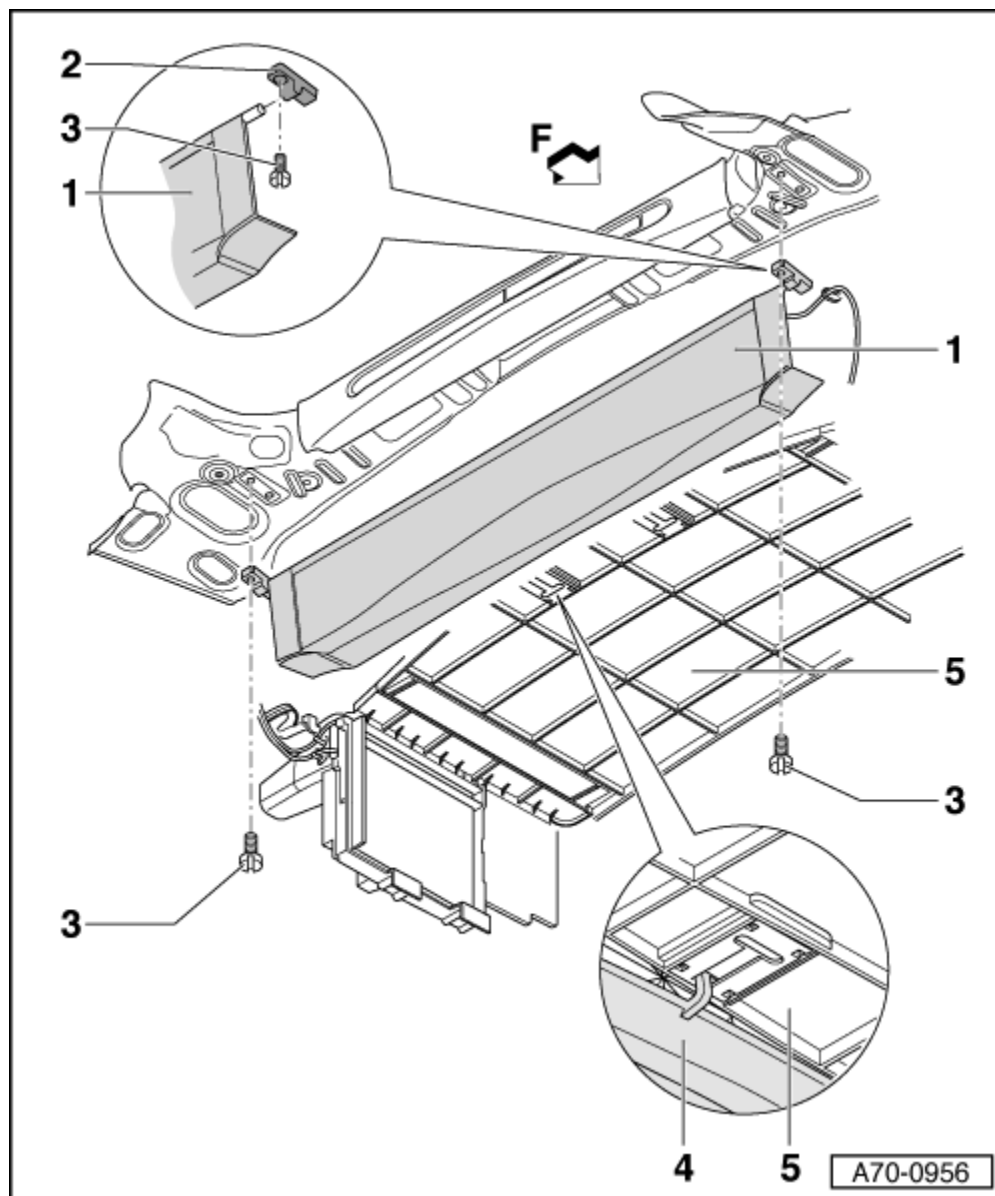

2 - Hinge (2x)

- Bend convertible roof compartment flap -1- on one side at hinge and disengage convertible roof compartment flap -1- at hinges.
- Unscrew bolt -3-.
- Disengage hinge -2- from body.

3 - Bolt (2x)

4 - Hook

5 - Variable convertible roof compartment