

Removing microswitch for variable convertible roof compartment

- Remove variable convertible roof compartment → [Chapter](#).


- Pull off floor covering -1- (convertible roof compartment lining) on right side so as to gain access to the two bolts -2-.

♦ Bond on floor covering with D 001 200.

- Remove bolts -2- (2x).

♦ Tightening torque: 4 Nm

- Separate centre section of convertible roof compartment -3- from right-side section -4-.

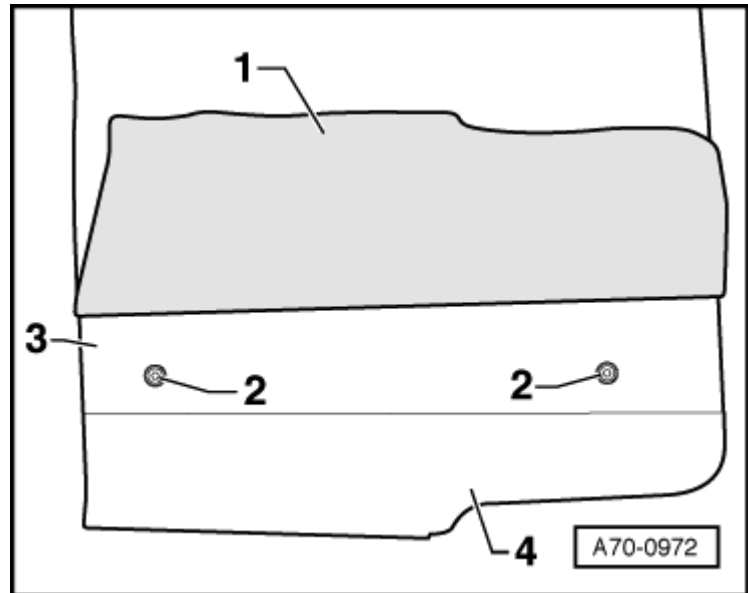


- Pull apart side sections -1- and -2-.

- Remove bolts -3- (4x) from inner lid.

♦ Tightening torque: 2 Nm

- Detach inner lid -1-.

- Carefully drill off microswitch weld on outside.

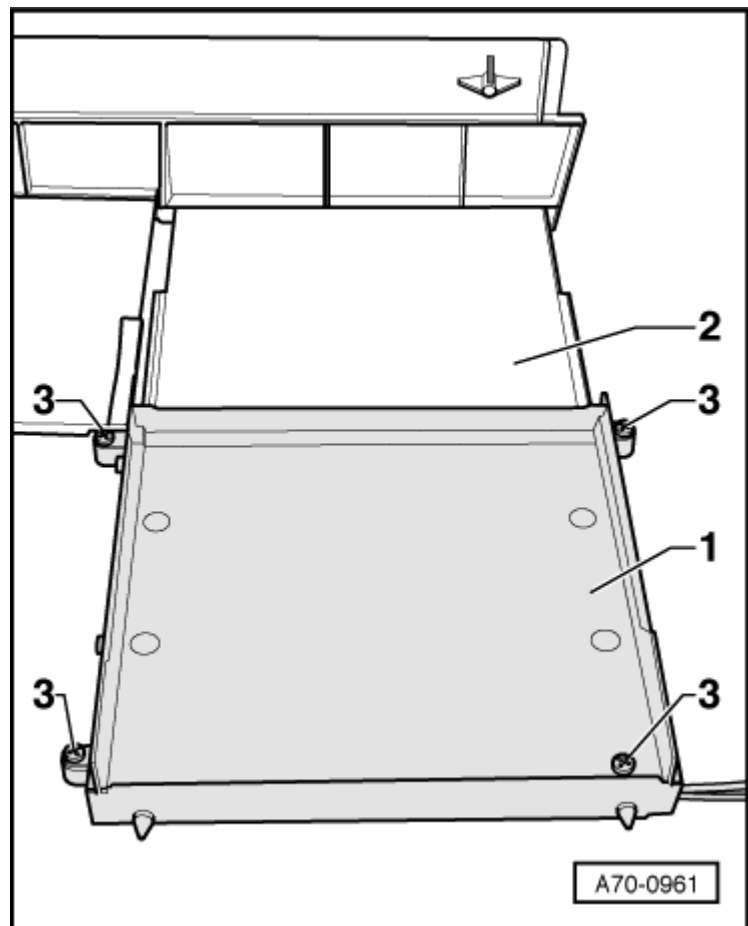

- Take out microswitch -1-.

- Use soldering iron to weld on new microswitch
-1- on outside.

