

## Removing

- Remove variable convertible roof compartment → Chapter.


- Pull off floor covering -1- (convertible roof compartment lining) on applicable side so as to gain access to the two bolts -2-.

♦ Bond on floor covering with D 001 200.

- Remove bolts -2- (2x).

♦ Tightening torque: 4 Nm

- Separate centre section of convertible roof compartment -3- from right-side section -4-.

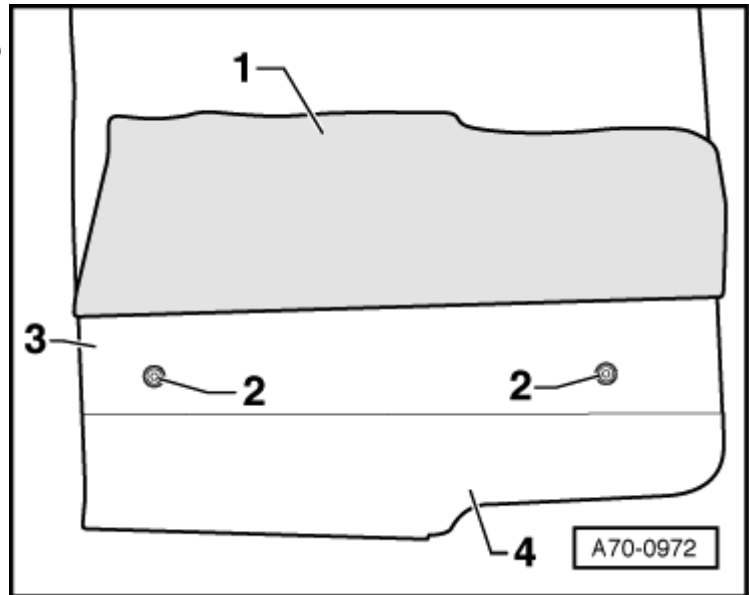


- Pull apart side sections -1- and -2-.

- Remove bolts -3- (4x) from inner lid.


♦ Tightening torque: 2 Nm

- Detach inner lid -1-.

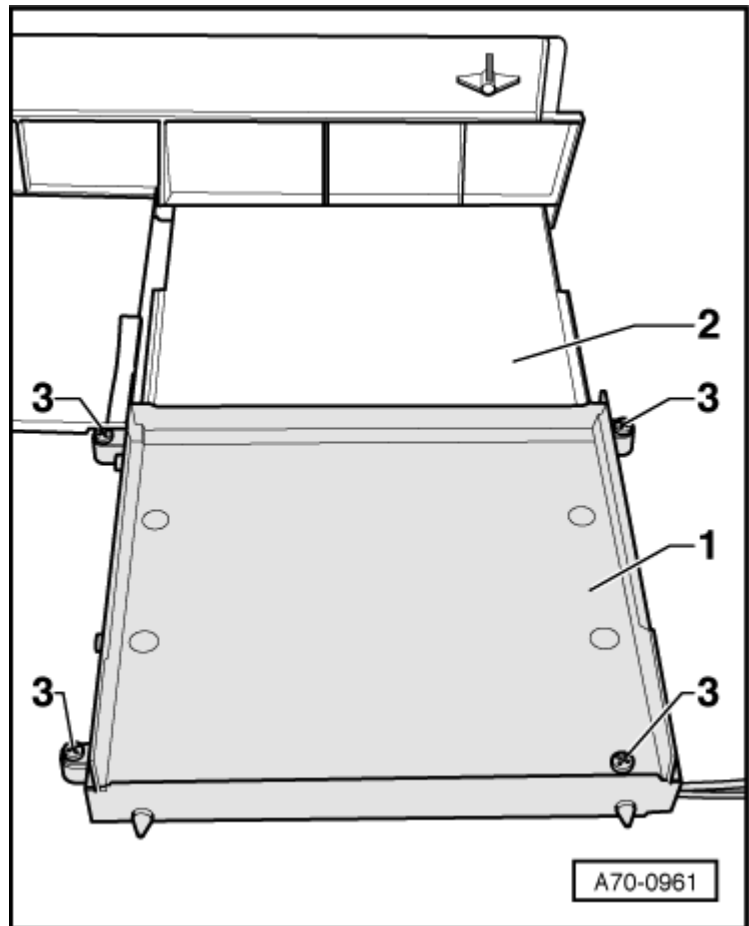


- Unscrew bolts -1- (4x) on both sides.

♦ Tightening torque: 2 Nm

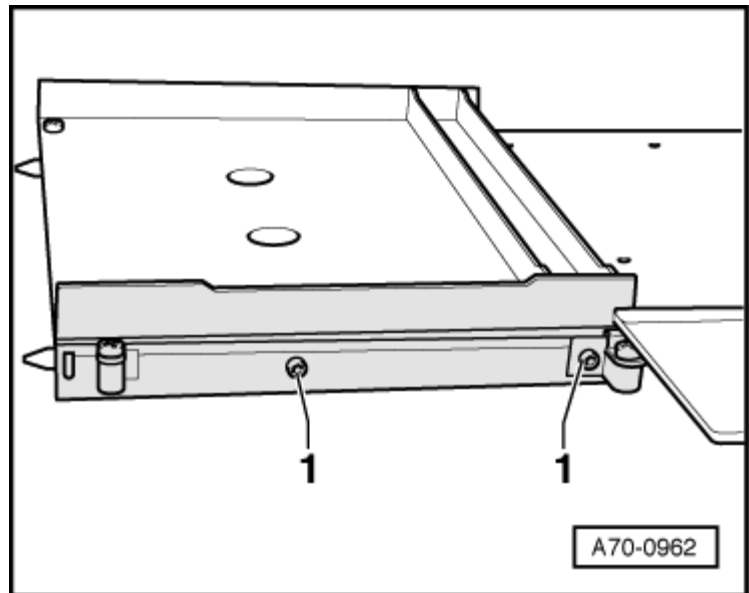

- Pull apart sections -1- and -4- upwards.
- Prise sliders -3- out of fastening mechanism of section -1-.
- Separate sections -1- and -4-.
- Release retainer -1- on back.

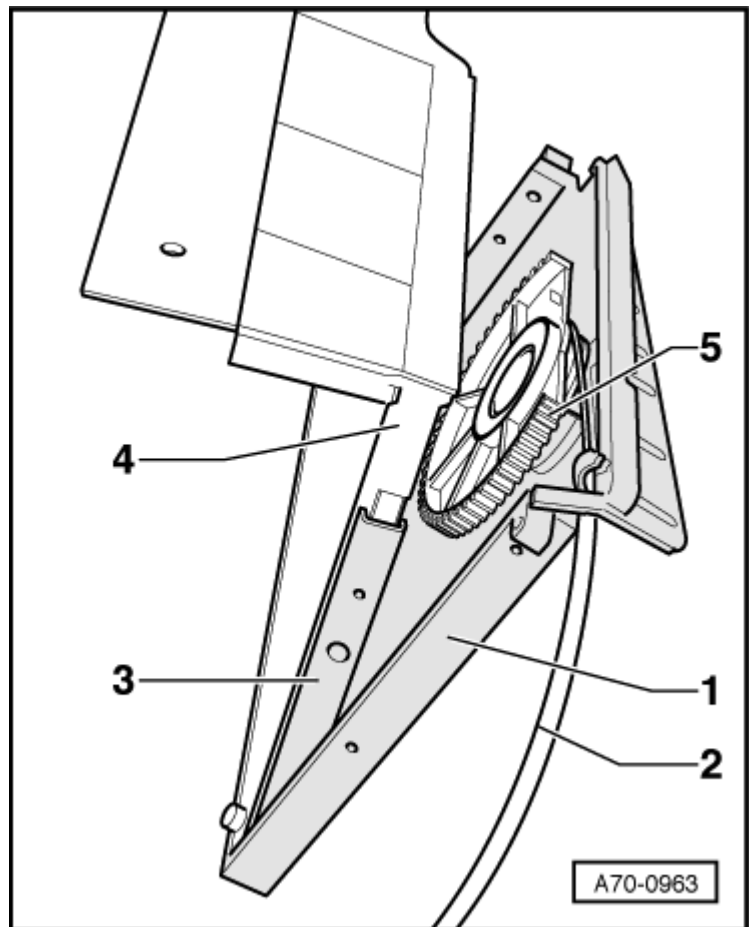

- Use flat screwdriver to prise out retainer -1-.
- Always renew retainer -1-.
- Detach toothed segment -2-.
- Disengage Bowden cable -3-.

