



Removing slider for variable convertible roof compartment

- Remove variable convertible roof compartment → Chapter.
- Pull off floor covering -1- (convertible roof compartment lining) on applicable side so as to gain access to the two bolts -2-.
- ♦ Bond on floor covering with D 001 200.
- Remove bolts -2- (2x).
- ♦ Tightening torque: 4 Nm
- Separate centre section of convertible roof compartment -3- from right-side section -4-.

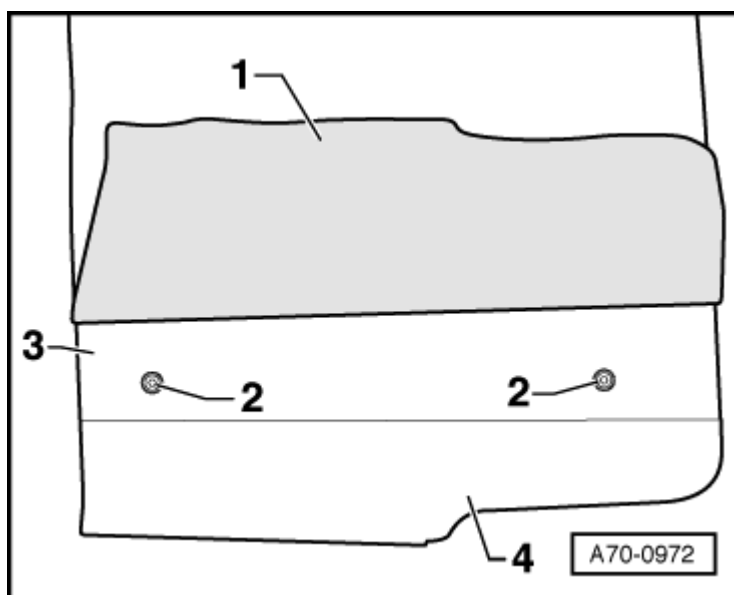


- Pull apart side sections -1- and -2-.
- Remove bolts -3- (4x) from inner lid.
- ♦ Tightening torque: 2 Nm
- Detach inner lid -1-.

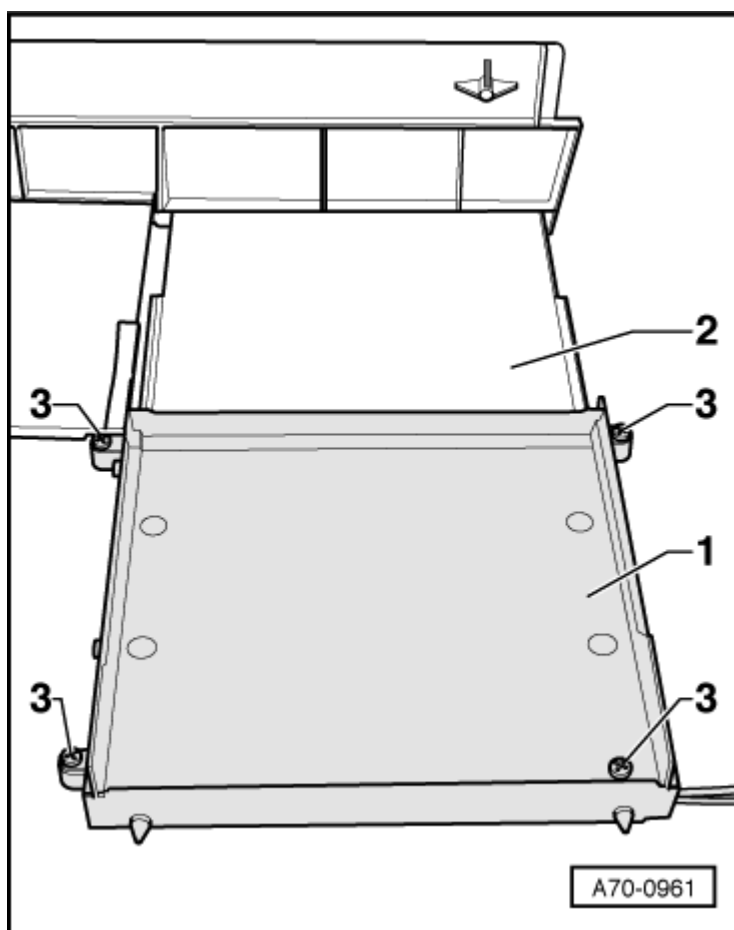


- Unscrew bolts -1- (4x) on both sides.

- ♦ Tightening torque: 2 Nm

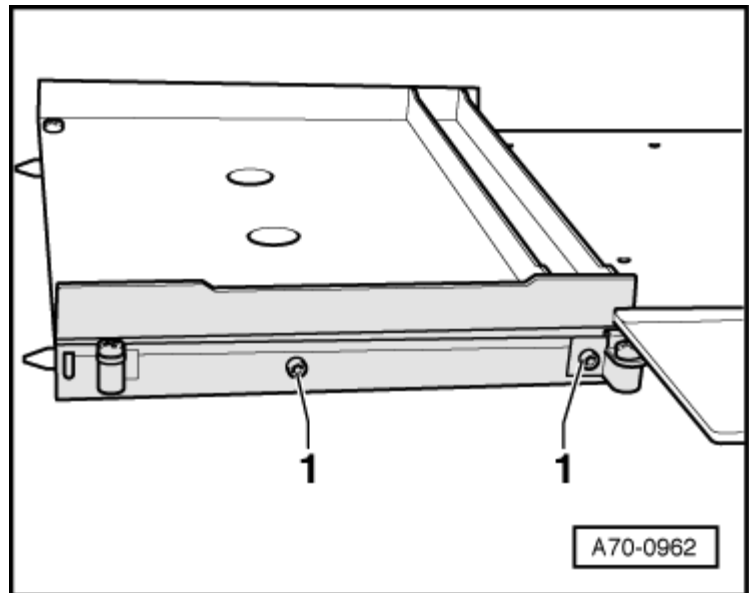

- Pull apart sections -1- and -4- upwards.
- Prise slider -3- out of fastening mechanism of section -1-.
- Separate sections -1- and -4-.

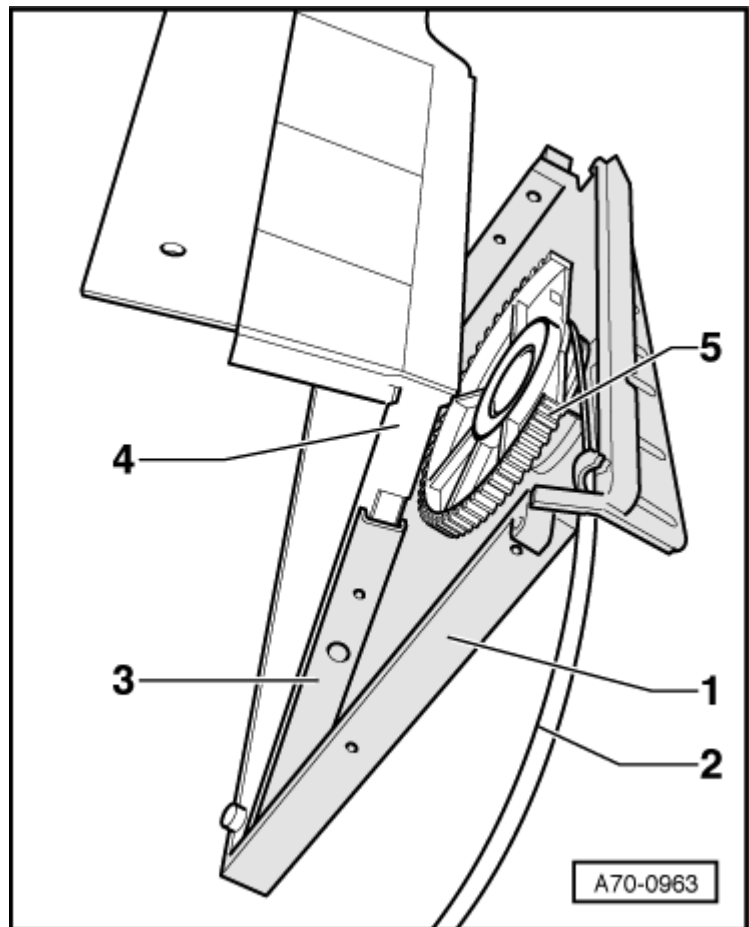

- Unscrew bolts -2- on left and right.
- ♦ Tightening torque: 1 Nm
- Move slider -1- downwards out of fasteners.
- Take out slider -1-.

