


## Installing

Toothed segment with Bowden cable for right side


- Engage Bowden cable -2- at long slot and insert Bowden cable -2- in groove -3-.
- Groove -4- is not used.

Toothed segment with Bowden cable for left side

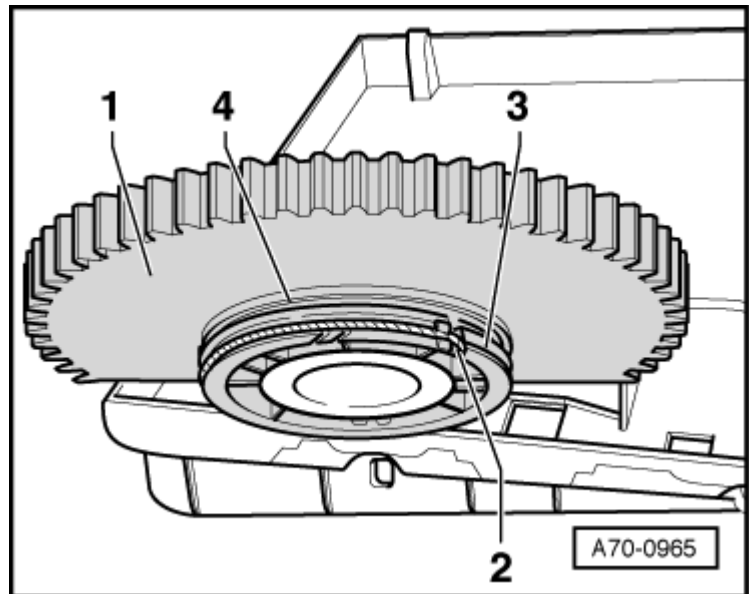


- Engage Bowden cable -2- in long slot and insert it in groove -4-.
- Engage Bowden cable for right side in short slot and insert Bowden cable -5- in groove -3- (Bowden cables routed in opposite directions).

All versions (continued)

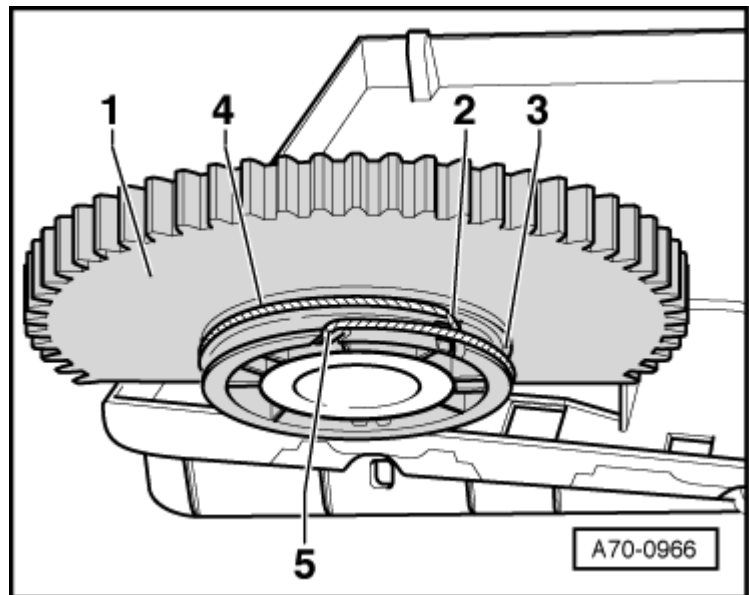

- Press toothed segment -2- onto guide.
- Engage new retainer -1-.
- The toothed segment -2- must be horizontal on installation.

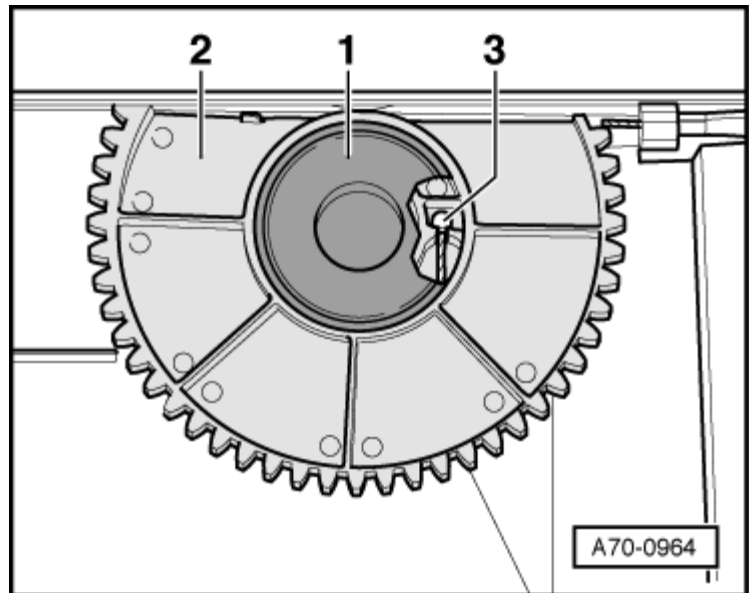

- On assembly, sliders -3- of section -4- must rest on rubber buffer at bottom.
- On right side take care not to crush microswitch. Section -4- is to be pulled up slightly for this reason.
- Press section -4- down again.
- On fitting together, the toothed segment -5- must be horizontal. Fit sections together in lowest position.
- After fitting together, move outer section of slider -3- upwards and engage it in studs.
- Perform remaining installation steps in reverse order of removal.

